


Loading Order

When loading the system memory, for single processor configuration, start in the slot furthest from the CPU, DIMM1 and move towards the CPU. For dual processor configuration, load the memory as above, alternating between the two processors. See illustration below.

Figure 2

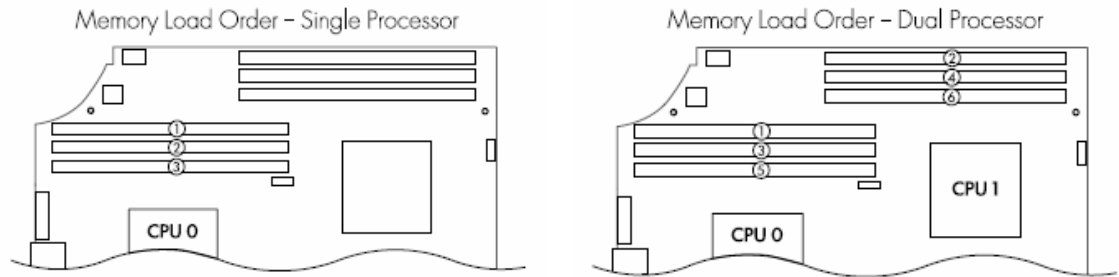

There is an BIOS setting to change between 2 different types of NUMA and Non-NUMA. See Memory Architecture and Efficiency White Paper for more information.